

Cabot (China) Investment Co., Ltd.  
Mr. Si Zhang  
15 Shuangbai Road  
CN - 201108 Shanghai

**Your contact person:**  
Mr. Si Zhang  
+86 21 5175 8920  
si.zhang@cabotcorp.com

**Our contact person:**  
Mr. Markus Tillmann  
markus.tillmann@imat-uve.de

Changning Shanghai, 19.01.2020

## **- PRELIMINARY REPORT 1 -**

---

**Your reference:** VDA 270  
**Your purchase order no.:** 5943 OS  
  
our order: 2101282 - 11601825  
Description: MS 2788A  
  
our quote: 21160697

### **Note**

---


The test result refers solely to the sample object. This test report may not be duplicated **in extracts** without written permission of the Shanghai imat automotive technology service Co., Ltd. SOHO Zhongshan Plaza , A-1001.

## Test object

11601825

MS 2788A

Our no. 11601825-0  
Entry of test object 19.12.2019

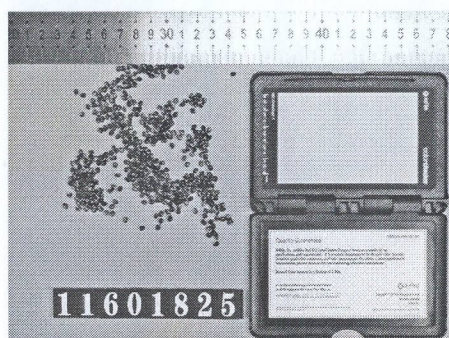


## Detailed documentation of the test results

11601825

MS 2788A

Our no.: 11601825-0

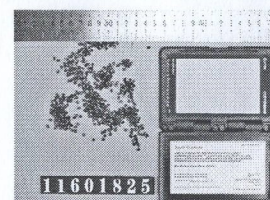

### Sample description

**Kind of wrapping at delivery** provided in plastic bags or plastic foil

**Product** semi-finished part

**Material description** plastics

**Colour, surface material** black

| No | parameter                                       | scale unit | test result /<br>test parameter                           |     |
|----|-------------------------------------------------|------------|-----------------------------------------------------------|-----|
|    | <b>VDA 270 (Variant 1), 1992-10, Odour test</b> |            |                                                           | [F] |
|    | Odor                                            | note       | <b>2,0</b>                                                |     |
|    | Single test results                             | note       | 2,0 / 2,0 / 1,5 / 1,5                                     |     |
|    | Standard deviation                              | note       | 0,289                                                     |     |
|    | Variant, test specimen                          |            | A                                                         |     |
|    | Volume of test vessel                           | l          | 1                                                         |     |
|    | Variant, storage condition                      |            | 1: temperature (23 ± 2) °C; storage duration (24 ± 1) h   |     |
|    | OEM                                             |            | unknown                                                   |     |
|    | Preconditioning                                 | d          | 7; (23 ± 2) °C / (50 ± 6) % RH                            |     |
|    | Date of completion                              |            | 2017-01-11                                                |     |
|    | technically verified by                         |            | Mr. Carsten Kohn (LD)                                     |     |
|    | <b>VDA 270 (Variant 2), 1992-10, Odour test</b> |            |                                                           | [F] |
|    | Odor                                            | note       | <b>2,0</b>                                                |     |
|    | Single test results                             | note       | 2,5 / 2,0 / 2,0 / 2,0                                     |     |
|    | Standard deviation                              | note       | 0,250                                                     |     |
|    | Variant, test specimen                          |            | A                                                         |     |
|    | Volume of test vessel                           | l          | 1                                                         |     |
|    | Variant, storage condition                      |            | 2: temperature (40 ± 2) °C; storage duration (24 ± 1) h   |     |
|    | OEM                                             |            | unknown                                                   |     |
|    | Preconditioning                                 | d          | 7; (23 ± 2) °C / (50 ± 6) % RH                            |     |
|    | Date of completion                              |            | 2017-01-11                                                |     |
|    | technically verified by                         |            | Mr. Carsten Kohn (LD)                                     |     |
|    | <b>VDA 270 (Variant 3), 1992-10, Odour test</b> |            |                                                           | [F] |
|    | Odor                                            | note       | <b>3,5</b>                                                |     |
|    | Single test results                             | note       | 4,0 / 3,0 / 3,0 / 3,5                                     |     |
|    | Standard deviation                              | note       | 0,479                                                     |     |
|    | Odor profile (qualitative)                      |            | <b>not clearly definable</b>                              |     |
|    | Variant, test specimen                          |            | A                                                         |     |
|    | Volume of test vessel                           | l          | 1                                                         |     |
|    | Variant, storage condition                      |            | 3: temperature (80 ± 2) °C; storage duration 2 h ± 10 min |     |
|    | OEM                                             |            | unknown                                                   |     |
|    | Preconditioning                                 | d          | 7; (23 ± 2) °C / (50 ± 6) % RH                            |     |
|    | Date of completion                              |            | 2017-01-11                                                |     |
|    | technically verified by                         |            | Mr. Carsten Kohn (LD)                                     |     |

## Detailed documentation of the test results

11601825

### Caption

---

A by DAkkS accredited test method  
U/F/I sub order/external processing/intragroup

If you have any questions concerning the test results, please contact :  
Mr. Markus Tillmann ([markus.tillmann@imat-uve.de](mailto:markus.tillmann@imat-uve.de)) or Mrs. Chunzi Jin ([chunzi.jin@imat-uve.cn](mailto:chunzi.jin@imat-uve.cn))